


WESLO®

gym4000

Model No. WLEMSY82000

Serial No. _____

Write the serial number in the space above for reference.

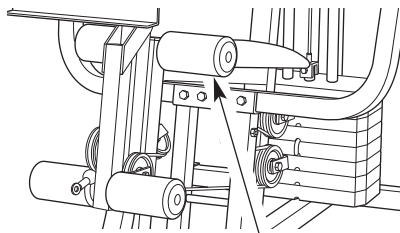

Serial Number Decal

QUESTIONS?

As a manufacturer, we are committed to complete customer satisfaction. If you have questions, or if there are missing/damaged parts, we will guarantee you complete satisfaction through direct assistance from our factory.

Please CALL:

0345-089009

Or WRITE:

ICON Fitness Lifestyle Ltd.
Greenwich House
223 North Street
Sheepscar
West Yorkshire
Leeds LS7 2AA

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

USER'S MANUAL



Visit our website at

www.weslo.com

*new products, prizes,
fitness tips, and much more!*


Table of Contents

IMPORTANT PRECAUTIONS	3
BEFORE YOU BEGIN	4
ASSEMBLY	5
ADJUSTMENT	16
WEIGHT RESISTANCE CHART	17
TROUBLE-SHOOTING AND MAINTENANCE	18
CABLE DIAGRAM	19
PART IDENTIFICATION CHART	End of Manual
PART LIST	End of Manual
EXPLODED DRAWING	End of Manual
HOW TO ORDER REPLACEMENT PARTS	Back Cover

Important Precautions

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the home gym system.

1. It is the responsibility of the owner to ensure that all users of the home gym system are adequately informed of all precautions.
2. Read all instructions in this manual and in the accompanying literature before using the home gym system.
3. If you feel pain or dizziness at any time whilst exercising, stop immediately and begin cooling down.
4. Use the home gym system only on a level surface. Cover the floor or carpet beneath the home gym system for protection.
5. Inspect and tighten all parts often. Replace any worn parts immediately.
6. Keep children under 12 and pets away from the home gym system at all times.
7. The home gym system is designed to be used by only one person at a time.
8. Keep hands and feet away from moving parts.
9. Always wear athletic shoes for foot protection.
10. Always stand on a foot plate when performing an exercise that could cause the home gym system to tip.
11. Never release the press arm, butterfly arms, leg lever, lat bar, leg press plate, or nylon strap whilst weights are raised. The weights will fall with great force.
12. Make sure that the cables remain on the pulleys at all times. If the cables bind whilst you are exercising, stop immediately and make sure that the cables are on all of the pulleys.
13. *Always disconnect the lat bar from the home gym system when performing an exercise that does not use the lat bar.*
14. The home gym system is intended for home use only. Do not use the home gym system in any commercial, rental, or institutional setting.
15. The decal shown below has been placed on the home gym system. If the decal is missing or illegible, please call our Customer Service Department at 0345-089009 to order a free replacement decal. Apply the decal in the location shown.

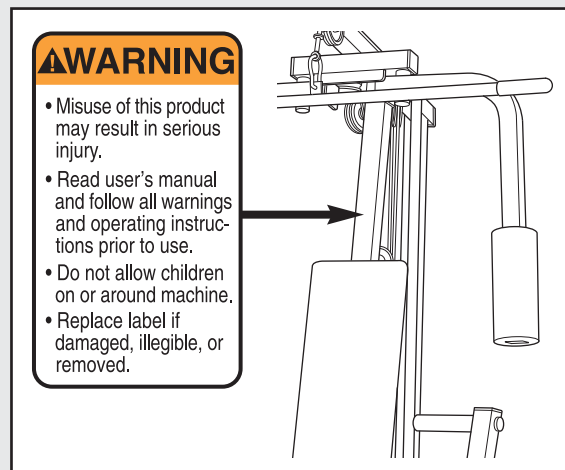

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

Before You Begin


Thank you for selecting the versatile WESLO® GYM 4000 home gym system. The WESLO® GYM 4000 offers a selection of weight stations designed to develop every major muscle group of the body. Whether your goal is to tone your body, build dramatic muscle size and strength, or improve your cardiovascular system, the WESLO® GYM 4000 will help you to achieve the specific results you want.

For your benefit, read this manual carefully before using the home gym system. If you have additional

questions, please call our Customer Service Department at **0345-089009**. To help us assist you, please note the product model number and serial number before calling. The model number is WLEM-SY82000. The serial number can be found on a decal attached to the home gym system (see the front cover of this manual).

Before reading further, please review the drawing below and familiarise yourself with the parts that are labelled.

**ASSEMBLED
DIMENSIONS:**
Height: 193 cm
Width: 97 cm
Length: 150 cm

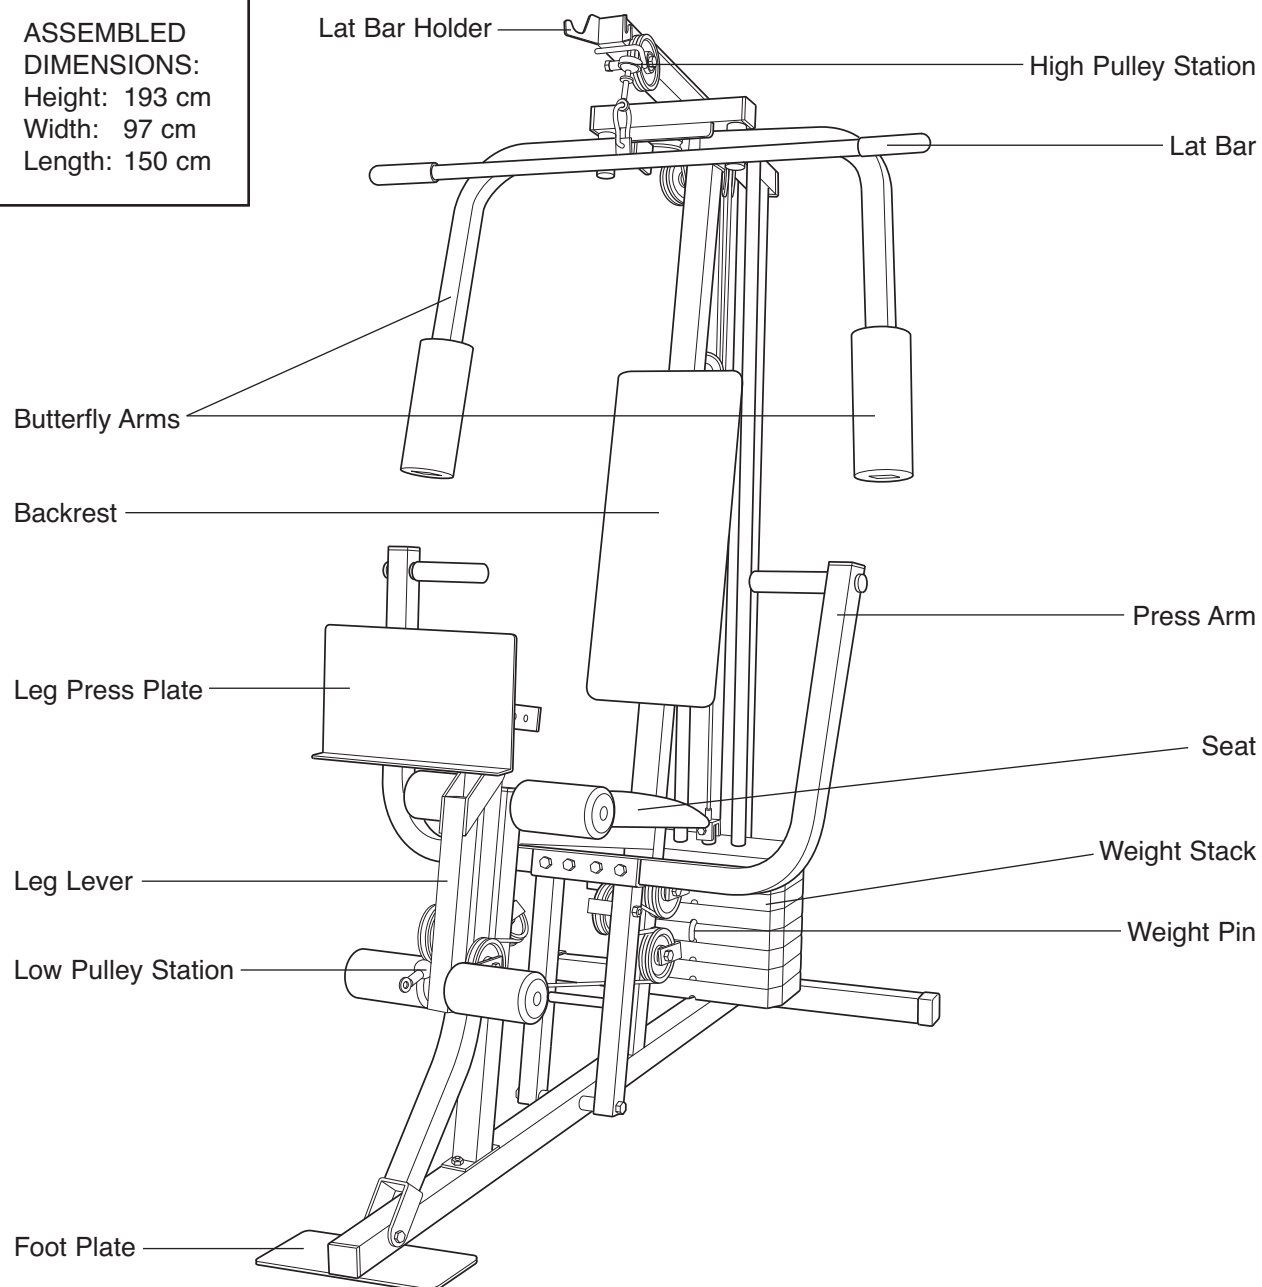


 


Assembly

Before beginning assembly, carefully read the following information and instructions:

- Place all parts of the home gym system in a cleared area and remove the packing materials; do not dispose of the packing materials until assembly is completed.
- The assembly is divided into four stages: 1) frame assembly, 2) press and butterfly arm assembly, 3) cable and pulley assembly, and 4) seat and backrest assembly. The hardware for each stage is packaged separately.
- Wait until you begin each assembly stage to open that parts bag.
- For help identifying the small parts used in assembly, **use the PART IDENTIFICATION CHART located in the centre of this manual.** Note: Some small parts may have been pre-attached for shipping. If a part is not in the parts bag, check to see if it has been pre-attached.

- As you assemble the home gym system, be sure that all parts are oriented as shown in the drawings.
- Tighten all parts as you assemble them, unless instructed to do otherwise.

THE FOLLOWING TOOLS (NOT INCLUDED) ARE REQUIRED FOR ASSEMBLY:

- **Two (2) adjustable spanners** 
- **One (1) standard screwdriver** 
- **One (1) phillips screwdriver** 
- **One (1) rubber mallet** 
- **Lubricant, such as grease or petroleum jelly, and soapy water will also be needed.**

Assembly will be more convenient if you have the following tools: A socket set, a set of open-end or closed-end wrenches, or a set of ratchet wrenches.


FRAME ASSEMBLY

1. **Before beginning assembly, be sure that you have read and understand the information in the box above.**


Press a 2" Square Outer Cap (51) onto each end of the Stabiliser (5). Press a 2" Square Inner Cap (27) into the end of the Base (4).

Insert two 5/16" x 2 3/4" Carriage Bolts (14) up through the Stabiliser (5). Insert four 5/16" x 2 1/2" Carriage Bolts (1) up through the Base (4).

Slide the indicated end of the Base (4) onto the 5/16" x 2 3/4" Carriage Bolts (14) in the Stabiliser (5). Slide the Rear Upright (56) onto the Carriage Bolts. Hand tighten a 5/16" Nylon Locknut (3) onto each Carriage Bolt. **The high side of the bracket on the Rear Upright must be on the side shown. Do not tighten the Nylon Locknuts yet.**

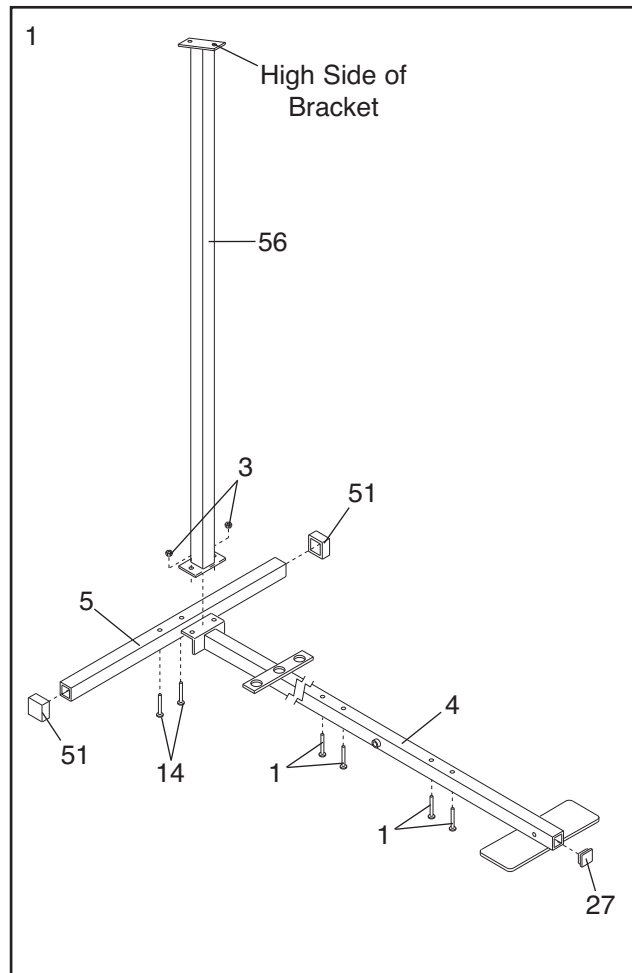

2. Slide the Front Upright (42) onto the 5/16" x 2 1/2" Carriage Bolts (1) in the Base (4). Hand tighten a 5/16" Nylon Locknut (3) onto each Carriage Bolt. **Do not tighten the Nylon Locknuts yet.**

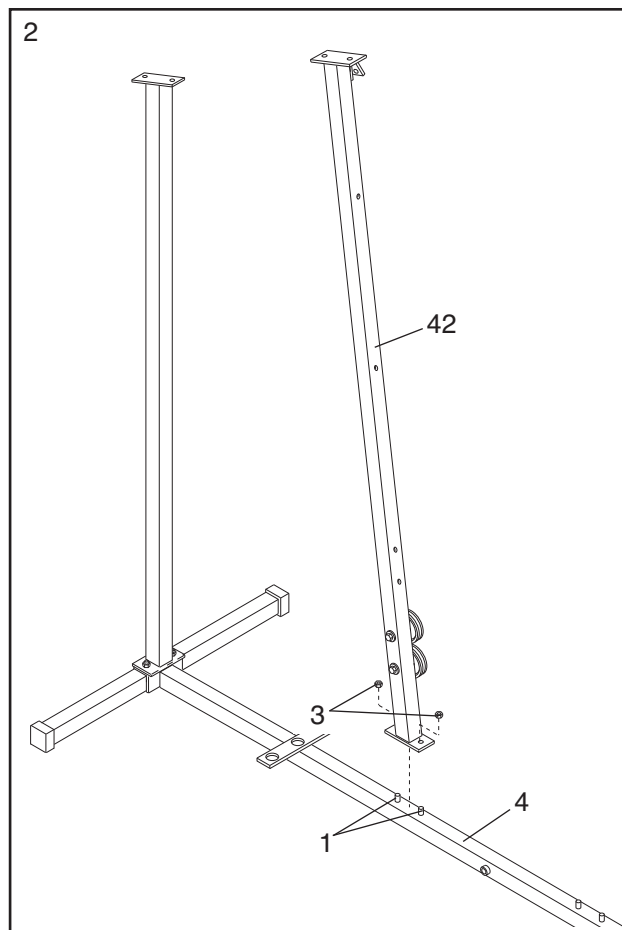



3. Press a 2" Square Inner Cap (27) into the open end of the Top Frame (55). Press a 1 3/4" Square Inner Cap (44) into each end of the crossbar on the Top Frame. Press two 1" Inner Caps (81) into the top of the crossbar.

Attach the Top Frame (55) to the Front Upright (42) and the Rear Upright (56) with four 5/16" x 2 3/4" Bolts (11), four 5/16" Flat Washers (8), and four 5/16" Nylon Locknuts (3).

Tighten all Nylon Locknuts used in steps 1 through 3.

4. Set two Weight Bumpers (19) onto the bracket on the Base (4) as shown.


Stack eight Weights (25) on the Weight Bumpers (19). Be sure that all of the Weights are turned so the pin grooves are on the same side.

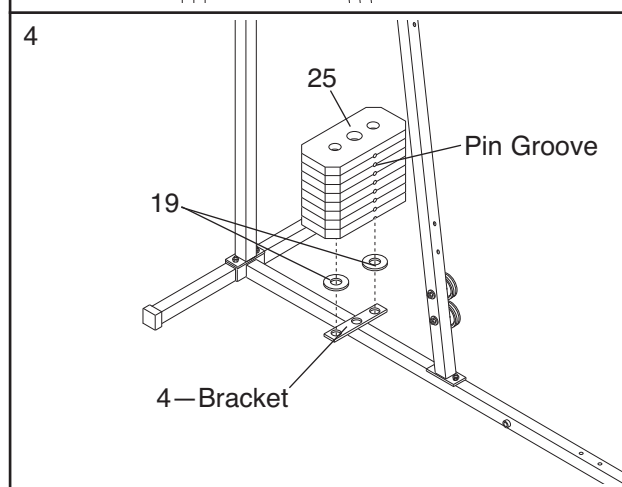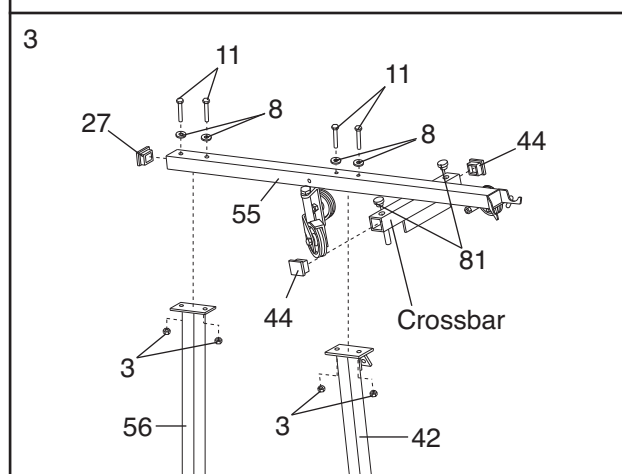

5. Press the Weight Tube Bumper (64) into the end of the Weight Tube (63). Insert the Weight Tube into the stack of Weights (25). Be sure that the pins on the Weight Tube are resting in the pin grooves in the upper Weight.


Lubricate the insides of the holes in the Top Weight (76). Set the Top Weight onto the stack of Weights (25).

Insert both Weight Guides (62) into the stack of Weights (25). **Be sure that the holes in the Weight Guides are at the top, as shown.**

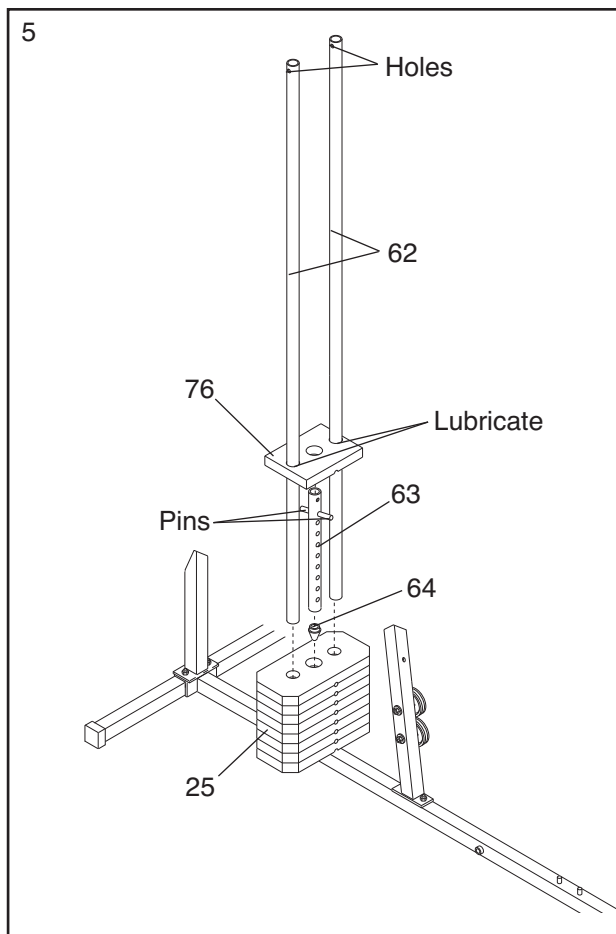


6. Attach the upper ends of the Weight Guides (62) to the Top Frame (55) with the 5/16" x 6" Bolt (60), two 1/2" x 3/4" Spacers (61), and a 5/16" Nylon Locknut (3).

Be sure that the Pulley Bracket (20) is in front of the Weight Guide (62) as shown.

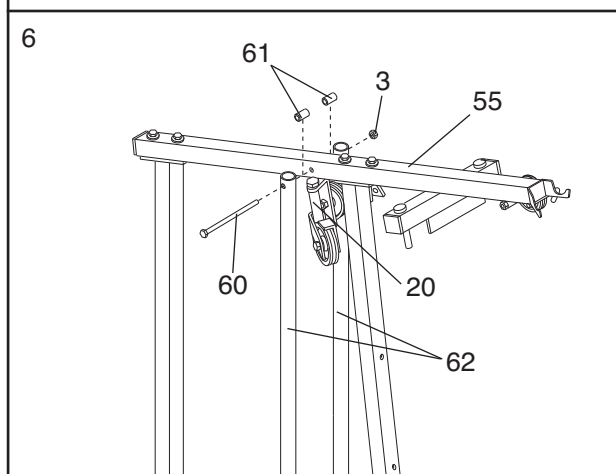


7. Press a 1" x 7/8" Plastic Bushing (75) onto each welded spacer on the Press Frame (17). Slide the Press Frame into place on the Base (4). **Note: This will be a tight fit. The Plastic Bushings should fit onto each end of the indicated tube in the Base. Be sure that the pulley is on the indicated side.**

Lubricate the 3/8" x 8" Bolt (59). Attach the Press Frame (17) to the Base (4) with the 3/8" x 8" Bolt and a 3/8" Nylon Locknut (21).

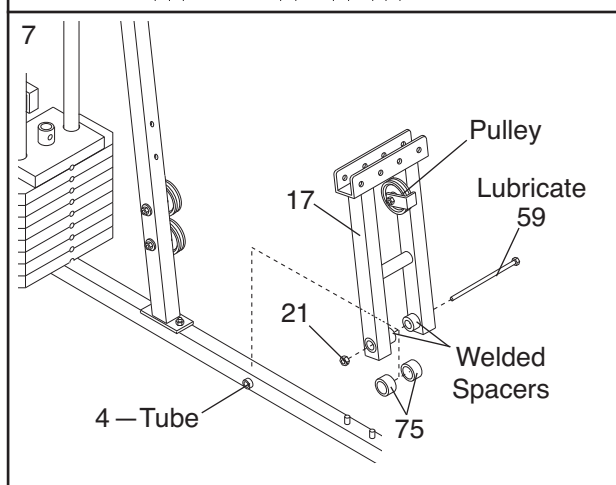

8. Press a 1 3/4" Square Inner Cap (44) into the top of a Press Arm (46). Wet the handle on the Press Arm with soapy water. Slide a Handgrip (31) onto the handle. Press a 1" Round Inner Cap (49) into the other end of the handle. Attach the Press Arm to one side of the Press Frame (17) with two 5/16" x 2 1/2" Bolts (22) and two 5/16" Nylon Locknuts (3).


Assemble the other Press Arm (46) in the same manner.

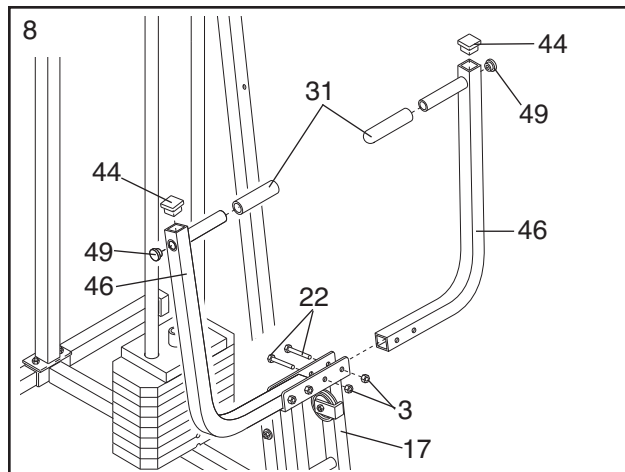

9. Identify the Right Arm (48) and the Left Arm (47). Note the position of the welded bracket on each Arm. **Arm identification is very important for step 10.**

Attach a "V"-Pulley (6) and a Long Cable Trap (50) to the Right Arm (48) with a 3/8" x 2 1/2" Bolt (7) and a 3/8" Nylon Locknut (21).

Attach a "V"-Pulley (6) and a Long Cable Trap (50) to the Left Arm (47) with a 3/8" x 2 1/2" Bolt (7) and a 3/8" Nylon Locknut (21).

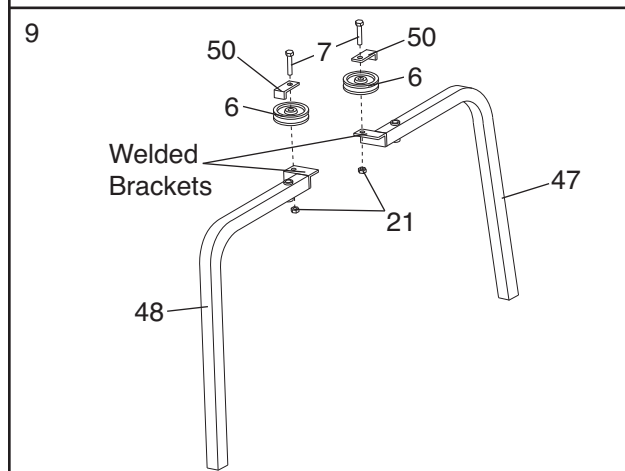


10. Lubricate both axles on the Top Frame (55).

Slide the Right Arm (48) onto the right axle. **Note: Be careful not to confuse the Right Arm with the Left Arm (47); refer to step 9 to identify the Right Arm. Be sure that the upper end of the Right Arm is behind the indicated bracket on the Top Frame (55).**

Tap two 1" Retainers (69) and a 1" Round Cover Cap (70) onto the right axle. **Be sure that the teeth on the Retainers bend toward the Cover Cap, as shown in the inset drawing.**

Attach the Left Arm (47) in the same manner.

Press 1 3/4" Square Inner Caps (44) into the lower ends of the Right and Left Arms (47, 48). Wet the lower end of each Arm with soapy water. Slide a 10" Pad (45) onto the lower end of each Arm.

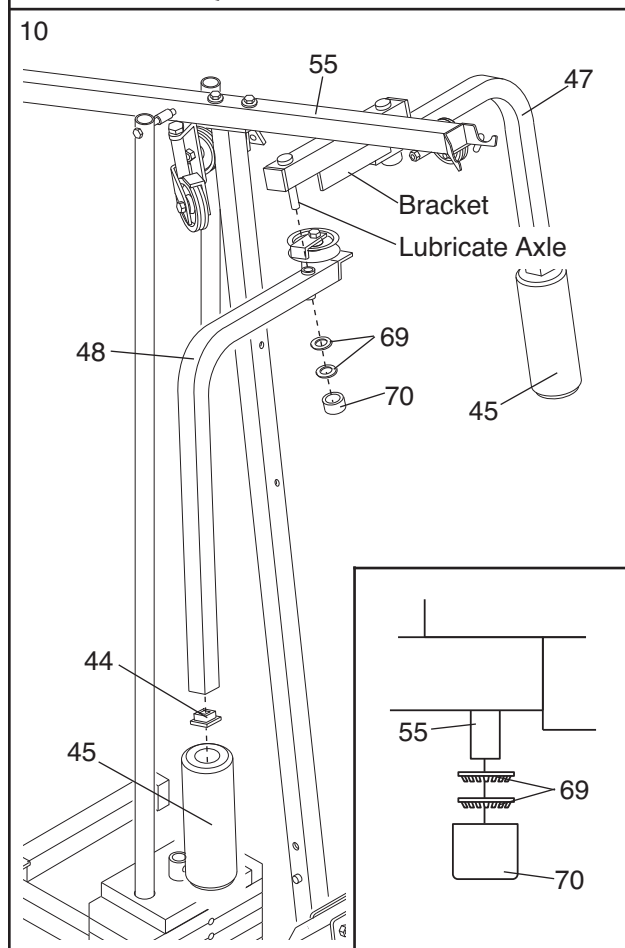


11. Press a 1 3/4" Square Inner Cap (44) into the Seat Frame (36). Attach a Bumper (73) to the Seat Frame with a 1/2" Tap Screw (65).

Slide the Seat Frame (36) onto the 5/16" x 2 1/2" Carriage Bolts (1) in the Base (4). **See the inset drawing. The bracket on the Seat Frame must be behind the Press Frame (17).** Hand-tighten a 5/16" Nylon Locknut (3) onto each Carriage Bolt. **Do not tighten the Nylon Locknuts until the end of this assembly step.**


Attach the Seat Frame (36) to the Front Upright (42) with two 5/16" x 2 3/4" Bolts (11), two 5/16" Flat Washers (8), and two 5/16" Nylon Locknuts (3).

Tighten all Nylon Locknuts used in this step now.

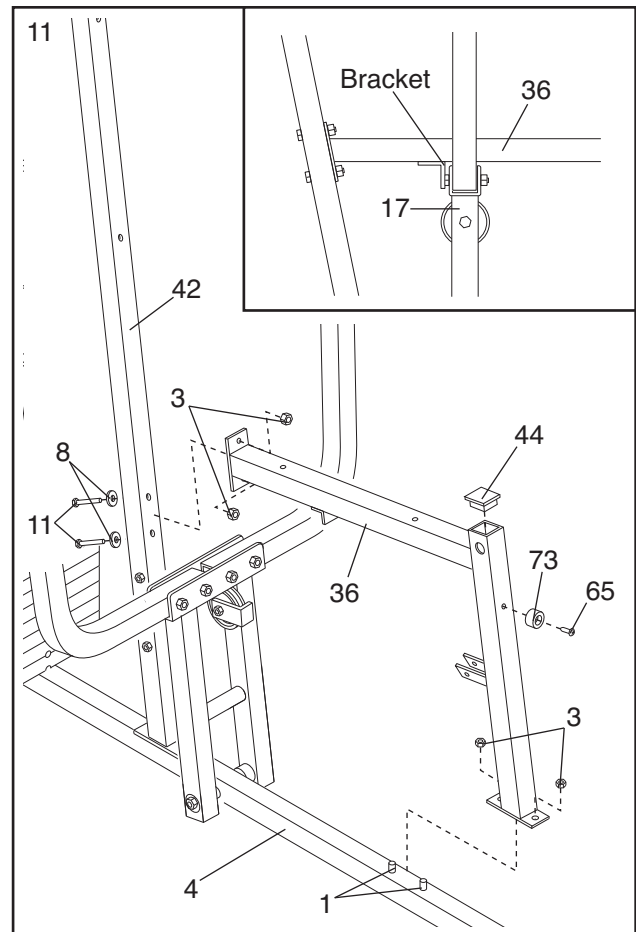


12. Attach a Bumper (73) to the Rocker Arm (32) with a 1/2" Tap Screw (65).

Lubricate a 3/8" x 3 1/4" Bolt (35). Attach the Rocker arm (32) to the Base (4) with the 3/8" x 3 1/4" Bolt and a 3/8" Nylon Locknut (21).

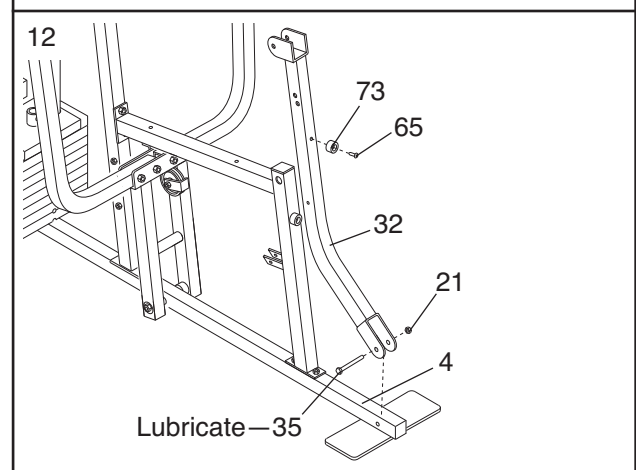

13. Lubricate a 3/8" x 2 1/2" Bolt (7). Attach the Leg Lever (29) to the Rocker Arm (32) with the 3/8" x 2 1/2" Bolt and a 3/8" Nylon Jam Nut (33).

Press a 1 3/4" Square Inner Cap (44) into each end of the Leg Lever (29).

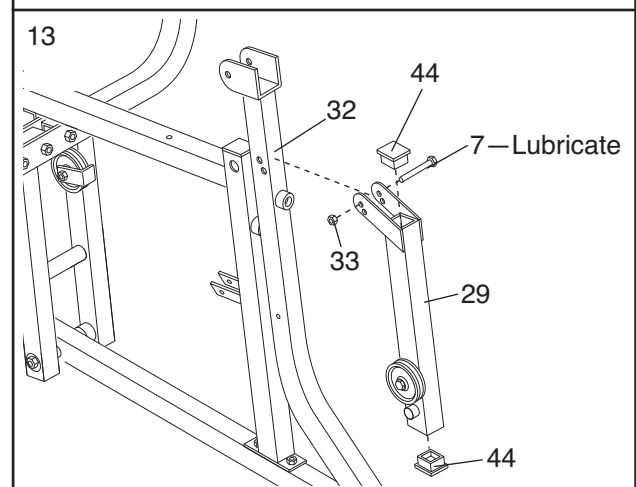

14. During steps 15 through 29, refer to the CABLE DIAGRAM on page 19 of this manual to verify proper cable routing. Before beginning this section, identify the Long Cable (23) and the Short Cable (58) by comparing the lengths of the cables.


IMPORTANT: Whilst assembling the cables, do not overtighten the bolts and nuts securing the pulleys. The pulleys must be able to turn freely.

15. **Locate the Long Cable (23).** Route the Long Cable around the indicated 3 1/2" Pulley (15) attached to the Top Frame (55). **Be sure that the end of the Cable with the ball is on the indicated side of the Pulley and that the Cable is between the Pulley and the hook.** Tighten the 3/8" x 3 3/4" Bolt (71) and the 3/8" Nylon Locknut (not shown).


16. Wrap the Long Cable (23) around a "V"-Pulley (6). Attach the "V"-Pulley and a Long Cable Trap (50) to the indicated bracket on the Front Upright (42) with a 3/8" x 2 1/2" Bolt (7) and a 3/8" Nylon Locknut (21). **Be sure that the Long Cable Trap is positioned to hold the Cable in place.**

17. Route the Long Cable (23) around the "V"-Pulley (6) on the Left Arm (47). **Be sure that the Cable is in the groove of the Pulley and that the Long Cable Trap (50) is positioned to hold the Cable in place.** Tighten the 3/8" x 2 1/2" Bolt (7) and the 3/8" Nylon Locknut (not shown).


14

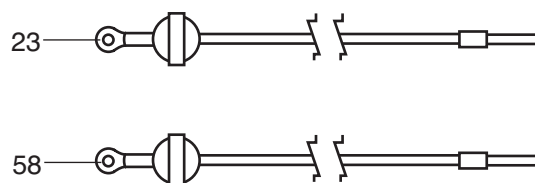


15

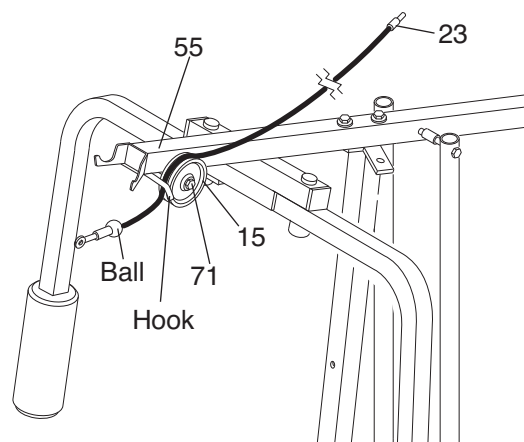


16

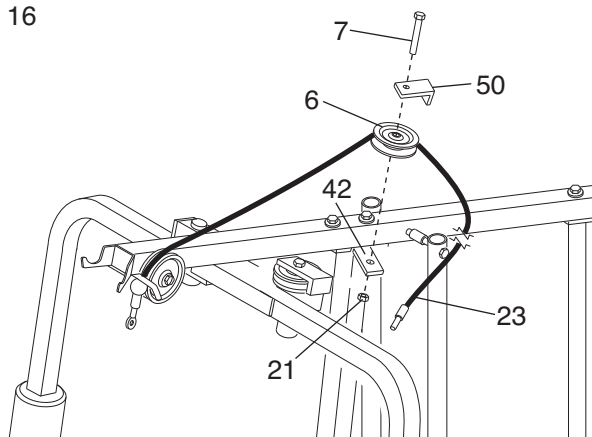


17

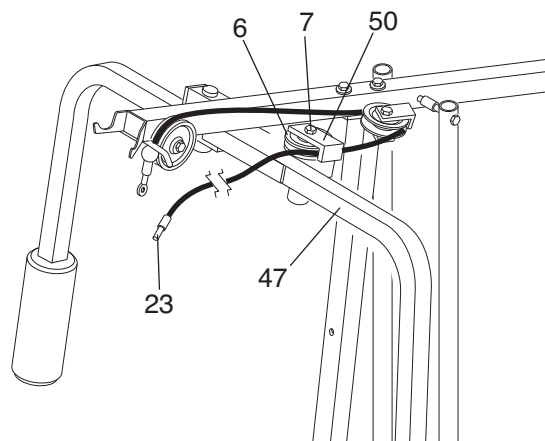

18. Route the Long Cable (23) around the “V”-Pulley (6) on the Right Arm (48). **Be sure that the Cable is in the groove of the “V”-Pulley and that the Long Cable Trap (50) is turned to hold the Cable in place.** Tighten the 3/8” x 2 1/2” Bolt (7) and the 3/8” Nylon Locknut (not shown).

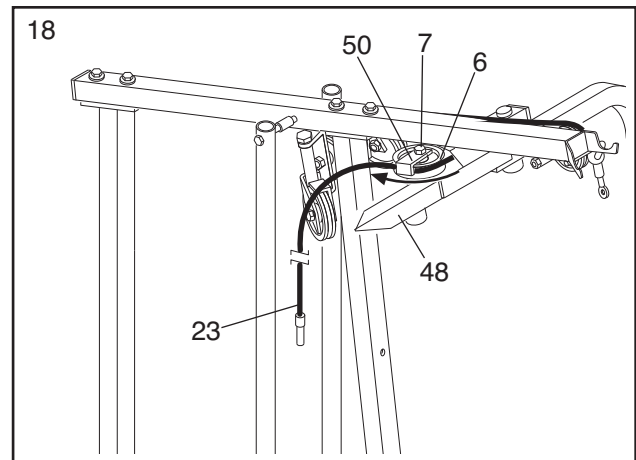


19. Route the Long Cable (23) around the 3 1/2” Pulley (15) attached to the Pulley Bracket (20). **Be sure that the Cable is in the groove of the Pulley and that the Cable Trap (66) is turned to hold the Cable in place.** Tighten the 3/8” x 2” Bolt (12) and the 3/8” Nylon Locknut (not shown).

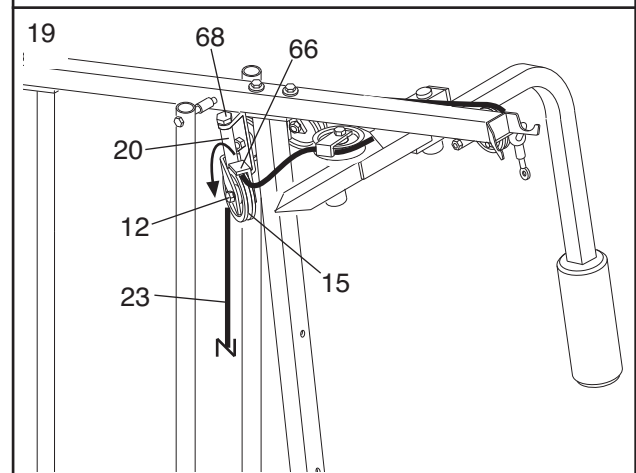


Be sure that the 5/16” x 5” Bolt (68) is properly tightened and that the Pulley Bracket (20) can move freely.

20. See the inset drawing. Attach a 3 1/2” Pulley (15) and a Cable Trap (66) to the indicated hole in the Long “U”-Bracket (57) with a 3/8” x 2” Bolt (12) and a 3/8” Nylon Locknut (21). **Be sure that the Cable Trap is inside the “U”-Bracket. Note: This may come pre-assembled.**

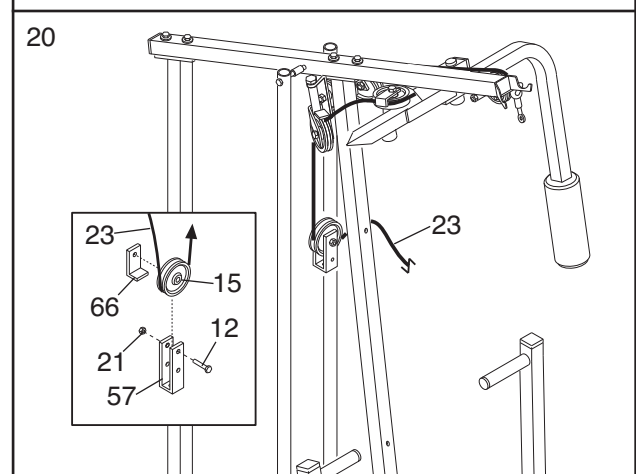


Route the Long Cable (23) around the 3 1/2” Pulley (15) and through the Long “U”-Bracket (57). **Be sure that the Cable is in the groove of the Pulley and that the Cable and Pulley move smoothly.**

21. **Note: The 3 1/2” Pulley (15) labelled in this step is pre-attached. It is shown removed for easy part identification.**

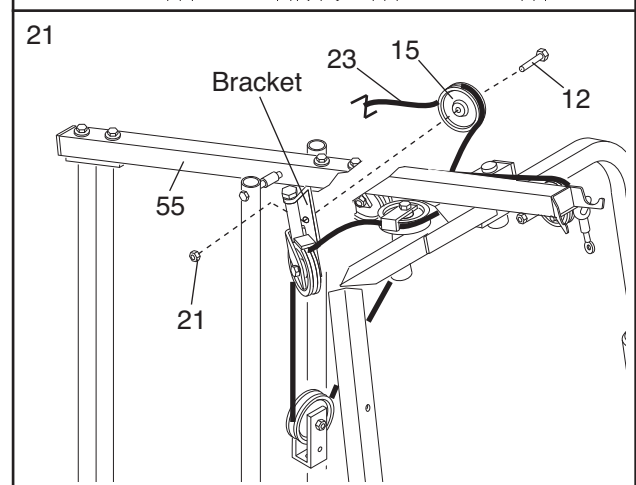


Route the Long Cable (23) around the 3 1/2” Pulley (15) attached to the bracket on the Top Frame (55). Tighten the 3/8” x 2” Bolt (12) and the 3/8” Nylon Locknut (21). **Be sure that the Cable is in the groove of the Pulley and that the Cable and Pulley move smoothly.**


22. **Locate the Short Cable (58).** Route the Short Cable under the 3 1/2" Low Pulley (77). **Be sure that the end of the Cable with the ball is on the indicated side of the Pulley and that the Cable is between the Pulley and the welded spacer on the Leg Lever (29).** Tighten the 3/8" x 3 1/2" Bolt (16) and the 3/8" Nylon Locknut (not shown).

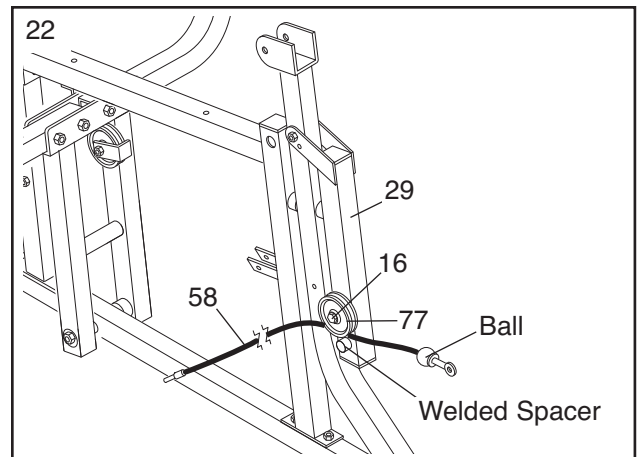

23. Wrap the Short Cable (58) around a "V"-Pulley (6). Attach the Pulley and a Long Cable Trap (50) inside the bracket on the Seat Frame (36) with a 3/8" x 2 1/2" Bolt (7) and a 3/8" Nylon Locknut (21). **Be sure that the Cable Trap is turned to hold the Cable in place and that the Cable is routed around the Pulley as shown.**

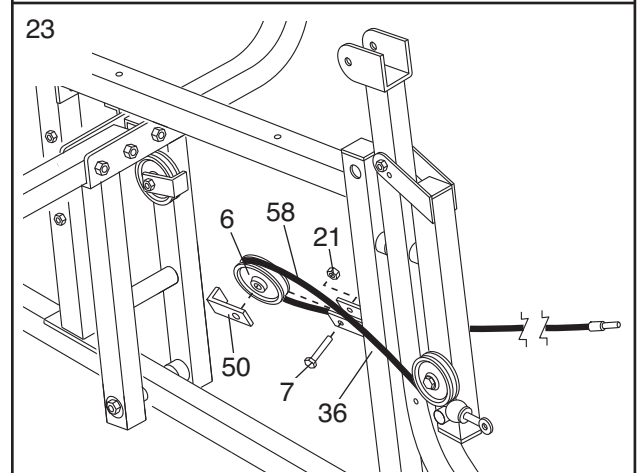


24. Wrap the Short Cable (58) around a 3 1/2" Pulley (15). Attach the Pulley to the Rocker Arm (32) with a 3/8" x 3 1/2" Bolt (16), a 3/8" Flat Washer (9), and a 3/8" Nylon Locknut (21). **Be sure that the Cable Trap (66) is turned to hold the Cable in place and that the Cable is routed around the Pulley as shown.**

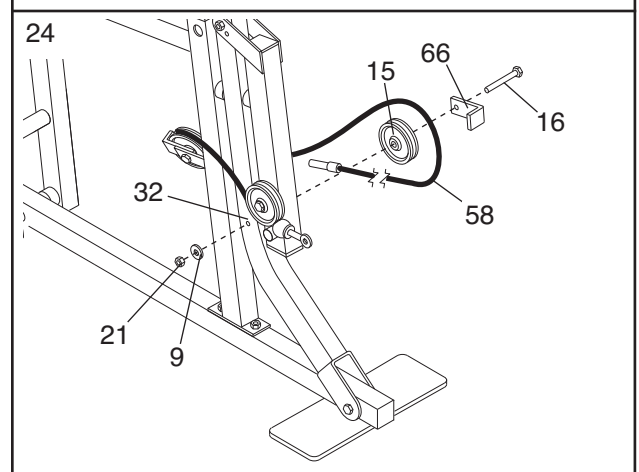

25. **Note: The 3 1/2" Pulley (15) labelled in this step is pre-attached. It is shown removed for easy part identification.**


Route the Short Cable (58) around the 3 1/2" Pulley (15) attached to the lower hole in the Front Upright (42). **Be sure that the Cable Trap (66) is turned to hold the Cable in place and that the Cable is routed around the Pulley as shown.** Tighten the 3/8" Nylon Locknut (21) and the 3/8" x 3 3/4" Bolt (71).

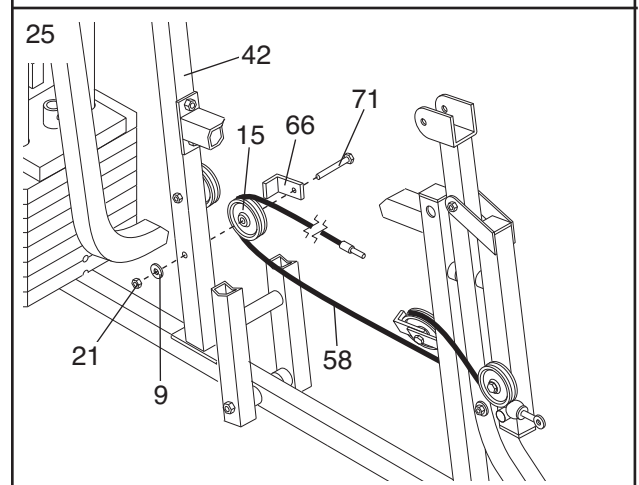

26. **Note: The 3 1/2" Pulley (15) labelled in this step is pre-attached. It is shown removed for easy part identification.**


Route the Short Cable (58) around the 3 1/2" Pulley (15) attached to the upper hole in the Press Frame (17). **Be sure that the Cable is routed around the Pulley as shown.**

Tighten the 3/8" Nylon Locknut (21) and the 3/8" x 3 1/2" Bolt (16).

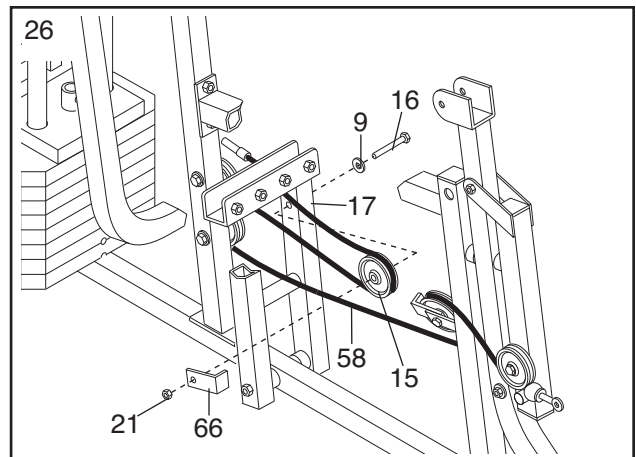


27. **Note: The 3 1/2" Pulley (15) labelled in this step is pre-attached. It is shown removed for easy part identification.**

Route the Short Cable (58) around the 3 1/2" Pulley (15) attached to the upper hole in the Front Upright (42). **Be sure that the Cable Trap (66) is turned to hold the Cable in place and that the Cable is routed around the Pulley as shown.** Tighten the 3/8" Nylon Locknut (21) and the 3/8" x 3 3/4" Bolt (71).

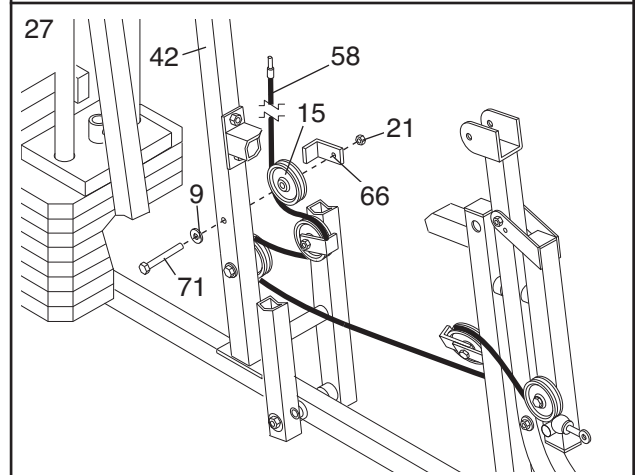


28. Attach the end of the Short Cable (58) to the Long "U"-Bracket (57) with a 1/4" Nylon Locknut (2) and a 1/4" Flat Washer (10). **Do not completely tighten the Nylon Locknut. It should be threaded onto the end of the Cable so only a couple of threads are showing above the nut, as shown in the inset drawing.**

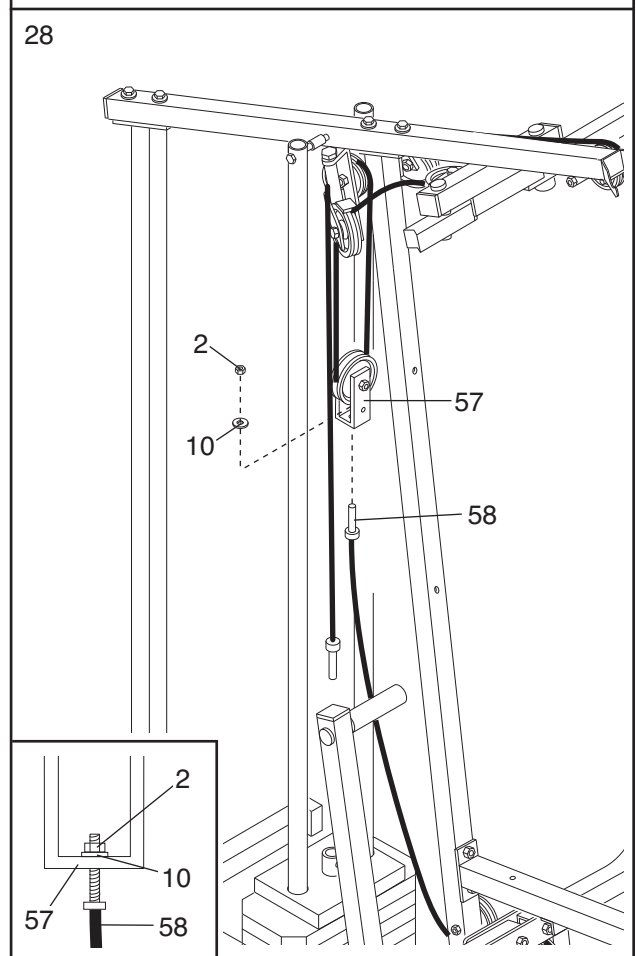


29. Attach the Long Cable (23) to the Small "U"-Bracket (67) with a 1/4" Nylon Locknut (2) and a 1/4" Flat Washer (10). **Do not completely tighten the Nylon Locknut. It should be threaded onto the end of the Cable only a couple of turns, as shown in the inset drawing.**

Attach the Small "U"-Bracket (67) to the Weight Tube (63) with the 5/16" x 1 3/4" Bolt (72) and a 5/16" Nylon Locknut (3).

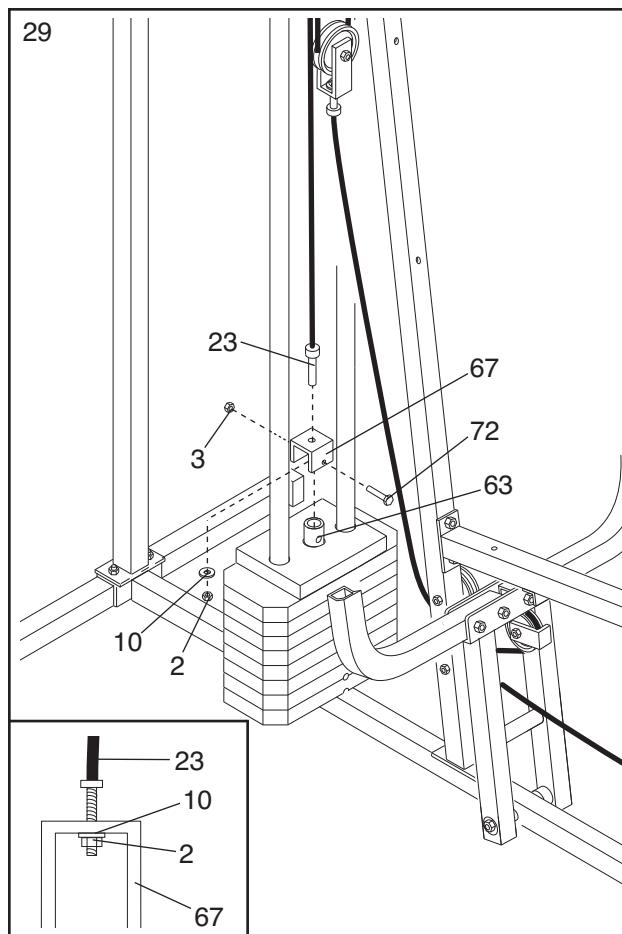


30. Attach the Backrest (41) to the Front Upright (42) with two 1/4" x 2 1/2" Screws (43) and two 1/4" Flat Washers (10).

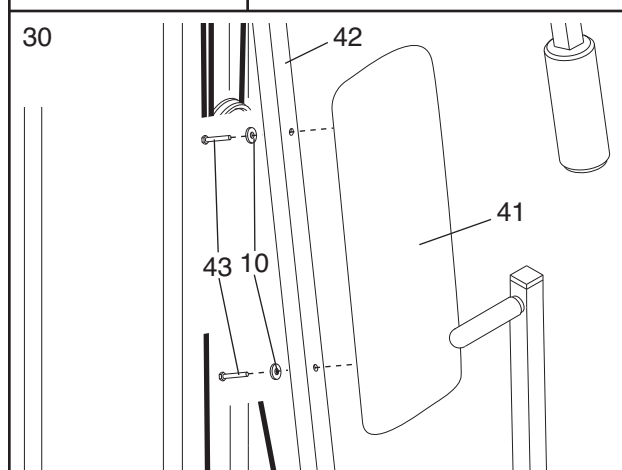

31. Insert the 1/4" x 2 1/2" Carriage Bolt (38) into the centre hole in the Seat Plate (37). Attach the Seat Plate to the Seat (13) with two 1/4" x 3/4" Screws (18).

Insert the 1/4" x 2 1/2" Carriage Bolt (38) into the indicated hole in the Seat Frame (36). Tighten a 1/4" Nylon Locknut (2) with a 1/4" Flat Washer (10) onto the Carriage Bolt.


Attach the other end of the Seat (13) to the Seat Frame (36) with a 1/4" Flat Washer (10) and the 1/4" x 2 1/4" Screw (24).

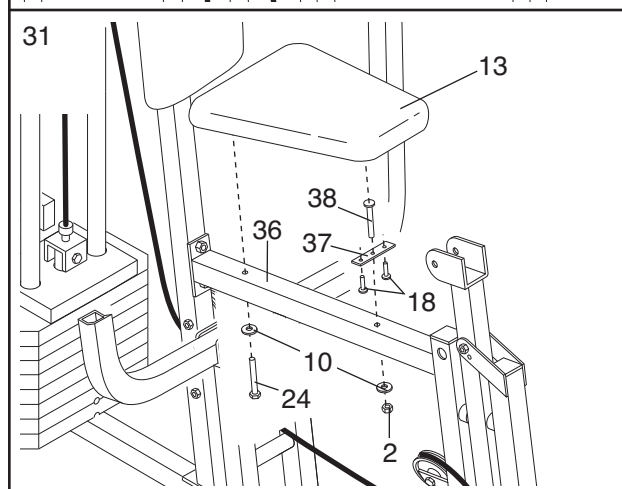

32. Press a 1 3/4" Square Inner Cap (44) into the Press Adjustment Tube (79).

Align one set of holes in the Press Adjustment Tube (79) with the holes in the Rocker Arm (32). Insert the "L"-Pin (40) through the holes. **Be sure that the Press Adjustment Tube is oriented as shown.**


Attach the Press Plate (78) to the Press Adjustment Tube (79) with a 5/16" x 2 1/2" Bolt (22), two 5/16" Flat Washers (8), and a 5/16" Nylon Locknut (3).

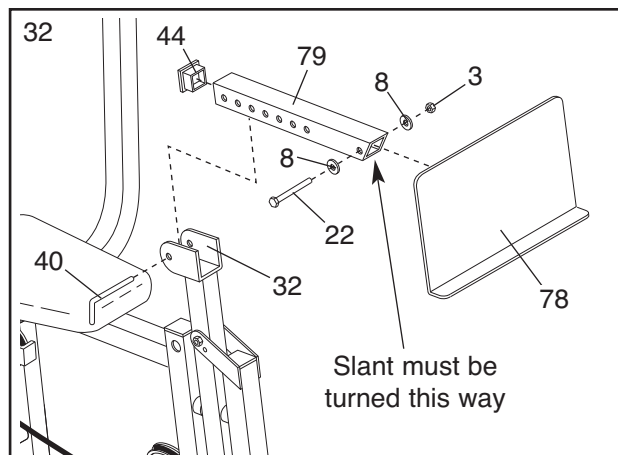

33. Press a 3/4" Round Inner Cap (34) into each end of the Short Pad Tube (28). Press a 3/4" Round Inner Cap into each end of the Long Pad Tube (80).

Insert the Short Pad Tube (28) into the Seat Frame (36). Slide a 5 1/2" Pad (30) onto each end of the Short Pad Tube.

Insert the Long Pad Tube (80) into the Leg Lever (29). Slide a 5 1/2" Pad (30) onto each end of the Long Pad Tube.

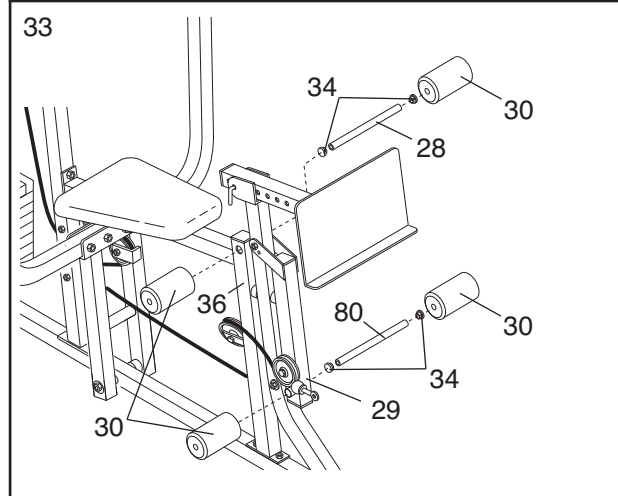

34. Make sure that all parts have been properly tightened. The use of the remaining parts will be explained in ADJUSTMENT, beginning on page 16 of this manual.

Before using the home gym system, pull each cable a few times to be sure that the cables move smoothly over the pulleys. If one of the cables does not move smoothly, find and correct the problem. **IMPORTANT: If the cables are not properly installed, they may be damaged when heavy weight is used. See the CABLE DIAGRAM on page 19 of this manual for proper cable routing. If there is any slack in the cables, you will need to remove it by tightening the cables. See TROUBLE-SHOOTING AND MAINTENANCE on page 18.**

Adjustment

The instructions below describe how each part of the home gym system can be adjusted. **IMPORTANT: When attaching the lat bar or nylon strap, make sure that the attachments are in the correct starting position for the exercise to be performed. If there is any slack in the cables or chain as an exercise is performed, the effectiveness of the exercise will be reduced.**

CHANGING THE WEIGHT SETTING

To change the weight setting of the weight stack, insert a Weight Pin (26) under the desired Weight (25). Be sure to insert the Weight Pin until the bent end of the Weight Pin is touching the Weights, and turn the bent end downward. The weight setting of the weight stack can be changed from 6.5 pounds to 106.5 pounds, in increments of 12.5 pounds. **Note: Due to the cables and pulleys, the amount of resistance at each exercise station may vary from the weight setting. Use the WEIGHT RESISTANCE CHART on page 17 to find the approximate amount of resistance at each weight station.**

ATTACHING THE LAT BAR OR NYLON STRAP TO THE HIGH PULLEY STATION

Attach the Lat Bar (54) to the Long Cable (23) with a Cable Clip (53). For some exercises, the Chain (52) should be attached between the Lat Bar and the Long Cable with two Cable Clips. **Adjust the length of the Chain between the Lat Bar and the Long Cable so the Lat Bar is in the correct starting position for the exercise to be performed.**




The Nylon Strap (39) can be attached in the same manner.

ATTACHING THE LAT BAR OR NYLON STRAP TO THE LOW PULLEY STATION

Attach the Lat Bar (54) to the Short Cable (58) with a Cable Clip (53). For some exercises, the Chain (52) should be attached between the Lat Bar and the Pulley Cable with two Cable Clips. **Adjust the length of the Chain between the Lat Bar and the Short Cable so the Lat Bar is in the correct starting position for the exercise to be performed.**

The Nylon Strap (39) can be attached in the same manner.

Always remove the leg press plate and lock the leg lever before using the low pulley station (see ADJUSTING AND REMOVING THE LEG PRESS PLATE AND ADJUSTMENT TUBE and LOCKING THE LEG LEVER on page 17).

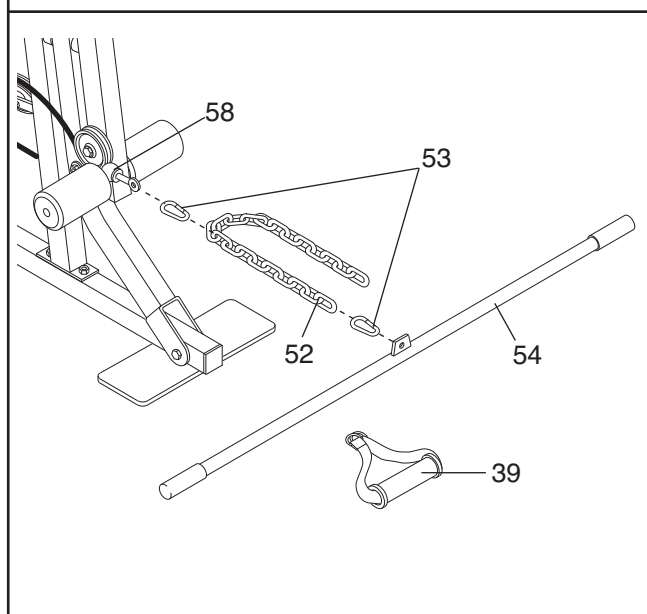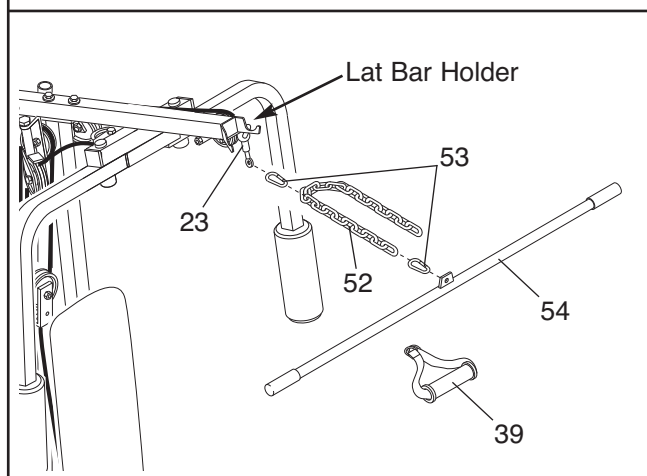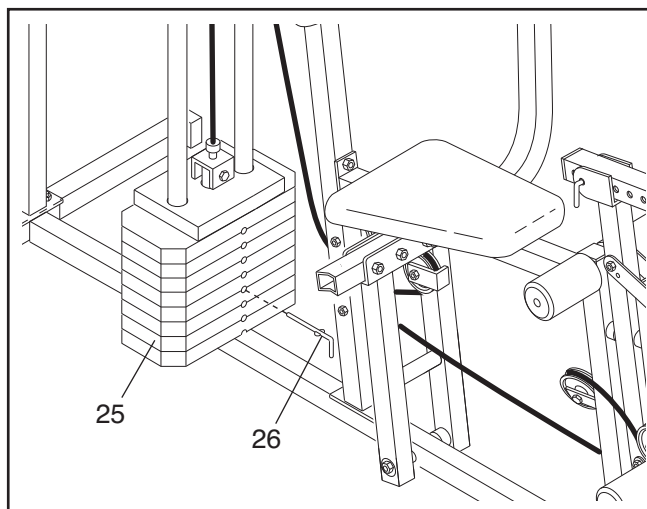


ADJUSTING AND REMOVING THE LEG PRESS PLATE AND ADJUSTMENT TUBE

To adjust the position of the Leg Press Plate (78), remove the “L”-Pin (40) from the Press Adjustment Tube (79) and the Rocker Arm (32). Align a different set of holes in the Press Adjustment Tube with the set of holes in the Rocker Arm. Re-insert the “L”-Pin.

For some exercises, the Press Adjustment Tube (79) must be removed. Remove the “L”-Pin (40). Lift the Press Adjustment Tube off the bracket on the Rocker Arm (32).

LOCKING THE LEG LEVER

When the low pulley station is in use, the Leg Lever (29) must be locked in place. Insert the “L”-Pin (40) through the hole in the Leg Lever and the hole in the Rocker Arm (32).

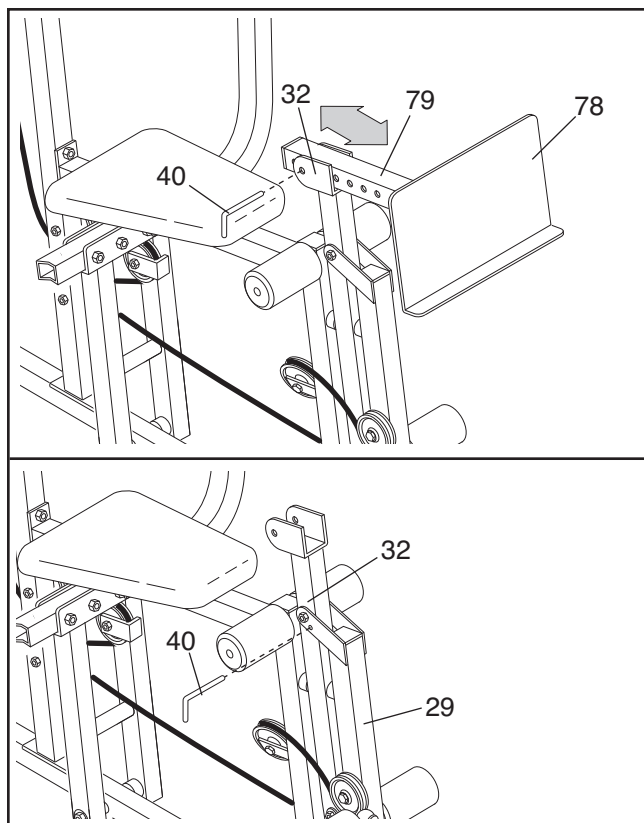

Weight Resistance Chart

This chart shows the approximate weight resistance at each station. “Top” refers to the 6.5 lb. top weight. The other numbers refer to the 12.5 lb. weight plates. Weight resistance shown for the butterfly arm station is for each butterfly arm. Note: The actual resistance at each weight station may vary due to differences in individual weight plates, as well as friction between the cables, pulleys, and weight guides.

WEIGHT PLATES	PRESS ARM (lbs.)	BUTTERFLY ARM (lbs.)	LEG LEVER (lbs.)	HIGH PULLEY (lbs.)	LOW PULLEY (lbs.)	LEG PRESS (lbs.)
Top	13	9	27	14	32	30
1	36	23	52	30	52	65
2	57	32	81	44	93	97
3	73	46	115	58	121	130
4	99	58	142	69	144	170
5	118	74	171	88	178	215
6	132	88	201	101	217	247
7	151	112	217	114	230	319
8	165	131	264	131	262	347

Trouble-shooting and Maintenance

Inspect and tighten all parts each time you use the home gym system. Replace any worn parts immediately. The home gym system can be cleaned using a damp cloth and mild non-abrasive detergent. Do not use solvents.


TIGHTENING THE CABLES

Woven cable, the type of cable used on the home gym system, can stretch slightly when it is first used. If there is slack in the cables before resistance is felt, the cables should be tightened. Slack can be removed from the cables by tightening the 1/4" Nylon Locknuts (2) at the end of the Long Cable (23) (see drawing 1) and at the end of the Short Cable (58) (see drawing 2). To do this you may need to remove the Small "U"-Bracket (67) from the Weight Tube (not shown) or remove the 3 1/2" Pulley (15) from the Long "U"-Bracket (57). Make sure that the cables are not too tight or the Top Weight (76) will be lifted off the weight stack.

Additional slack can be removed by moving the 3 1/2" Pulley (15) to the other hole in the Long "U"-Bracket (57). Remove the 3/8" Nylon Locknut (21) and the 3/8" x 2" Bolt (12) from the Cable Trap (66), Pulley, and "U"-Bracket. Re-attach the Pulley and Cable Trap. Be sure that the Cable trap is in the proper position and that the Cable and Pulley move smoothly.


Note: If a cable tends to slip off the pulleys often, the cable may have become twisted. Remove the cable and re-install it.


If the cables need to be replaced, see ORDERING REPLACEMENT PARTS on the back cover of this manual.

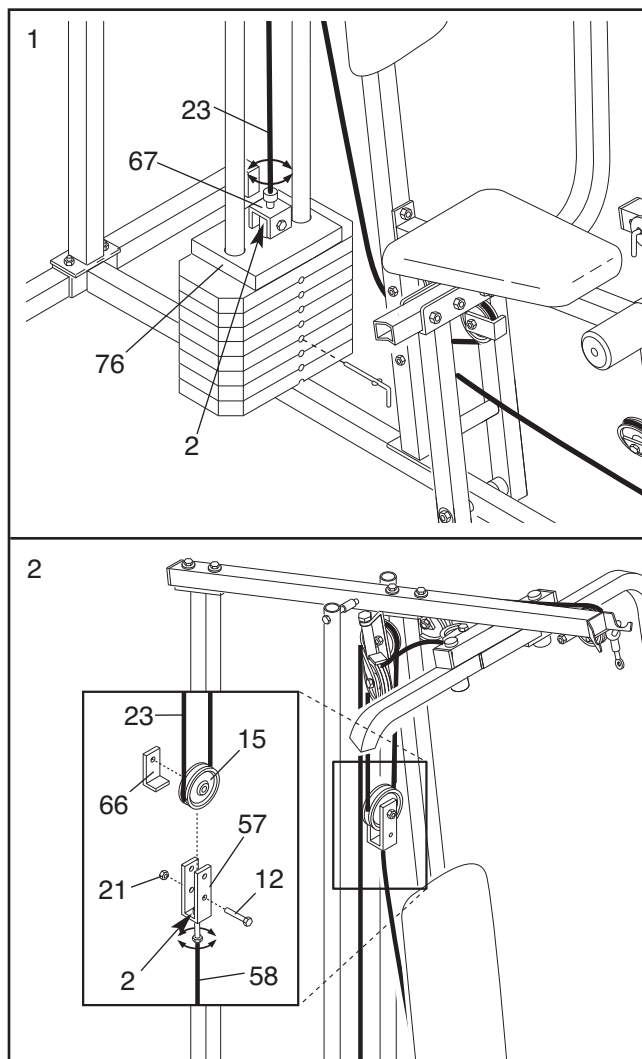


Cable Diagram

The cable diagram below shows the proper routing of the Short Cable (58) and the Long Cable (23). Use the diagram to be sure that the two cables and the cable traps have been assembled correctly. If the cables have not been correctly routed, the home gym system will not function properly and damage may occur. The numbers show the correct route for each cable. The starting and ending points of each cable are labelled. **Be sure that the cable traps do not touch or bind the cables.**

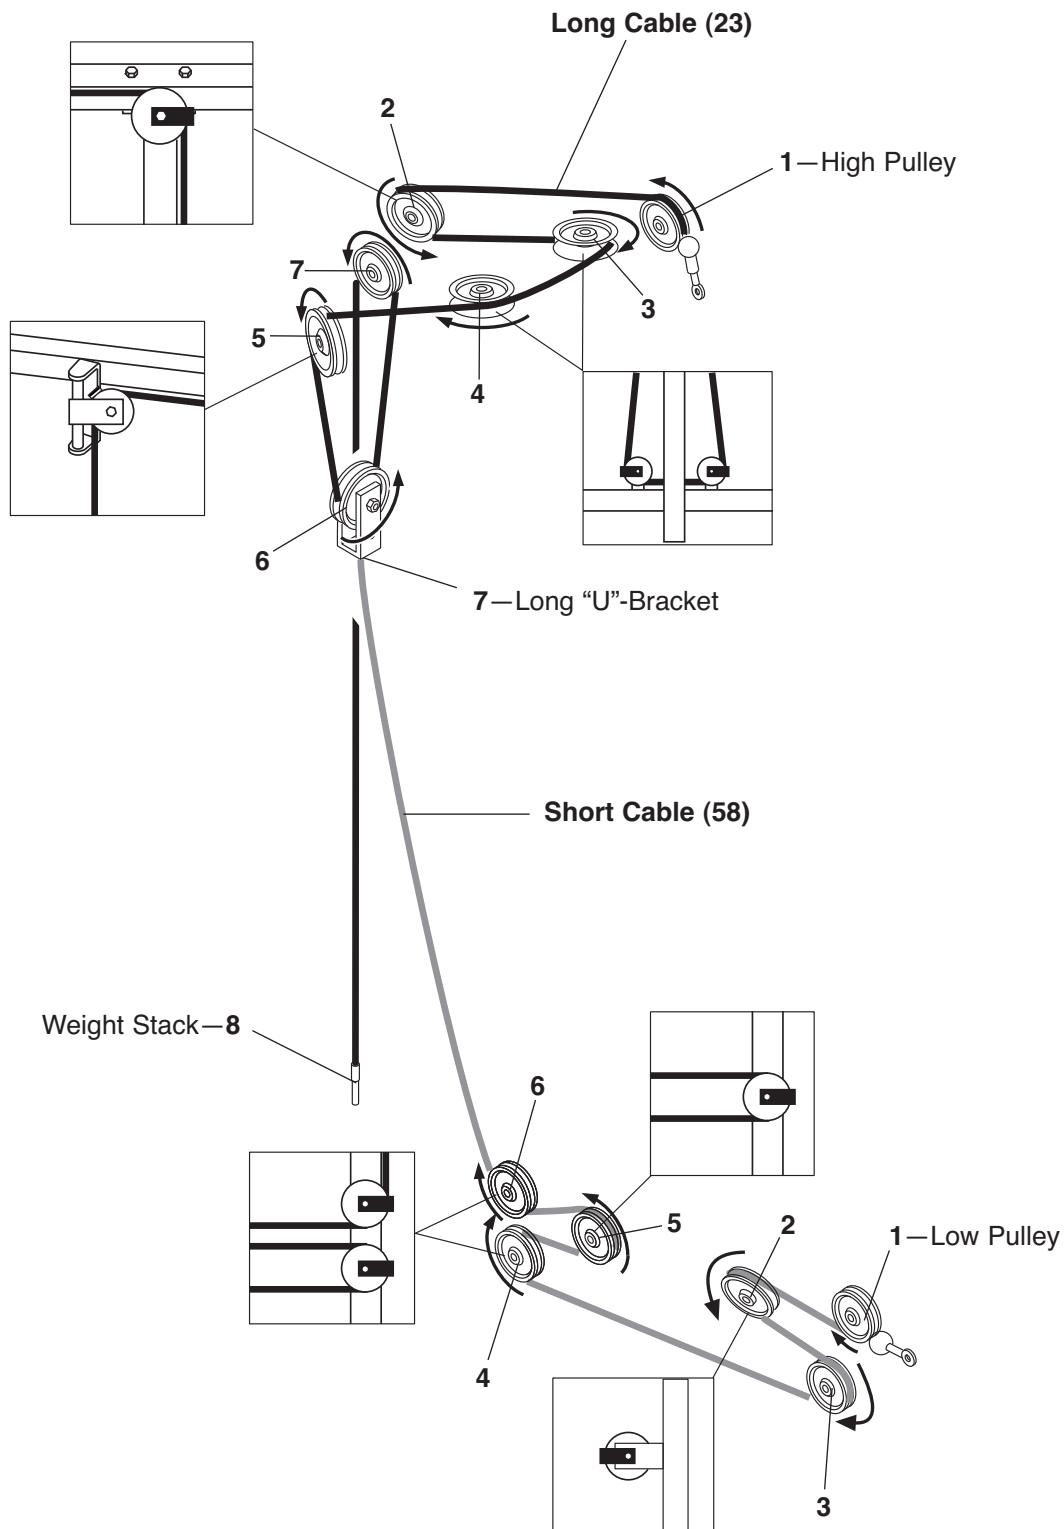


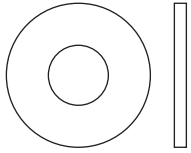


1/4" Flat Washer (10)

 


5/16" x 1 3/4" Bolt (72)

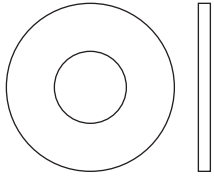


5/16" Flat Washer (8)

 


5/16" x 2 1/2" Bolt (22)

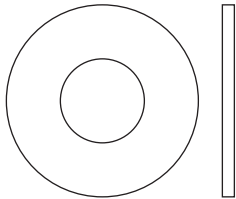

3/8" Flat Washer (9)

 


5/16" x 2 3/4" Bolt (11)

 

1/4" x 3/4" Screw (18)



 
5/16" x 2 1/2" Carriage Bolt (1)




1/4" x 2 1/4" Screw (24)



 
5/16" x 2 3/4" Carriage Bolt (14)




1/4" x 2 1/2" Screw (43)

 


1/4" x 2 1/2" Carriage Bolt (38)

 


5/16" x 5" Bolt (68)

 


5/16" x 6" Bolt (60)

 


5/16" Nylon Locknut (3)

 


1/4" Nylon Locknut (2)

 


3/8" Nylon Locknut (21)

 


3/8" Nylon Jam Nut (33)

 


3/8" x 2" Bolt (12)

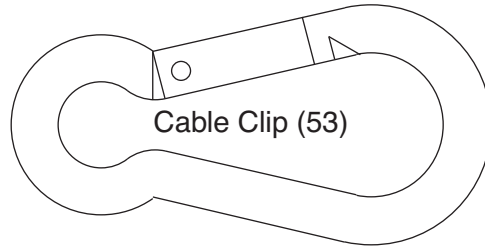


Cable Clip (53)

 


3/8" x 2 1/2" Bolt (7)

 


3/8" x 3 1/4" Bolt (35)

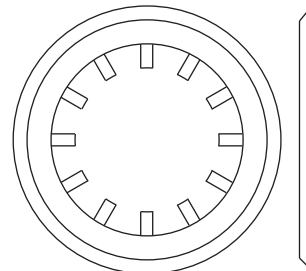

1" Retainer (69)

 


3/8" x 3 1/2" Bolt (16)

 


3/8" x 3 3/4" Bolt (71)



 
3/8" x 8" Bolt (59)




1/2" x 3/4" Spacer (61)

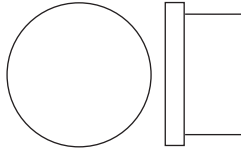


3/4" Round Inner Cap (34)

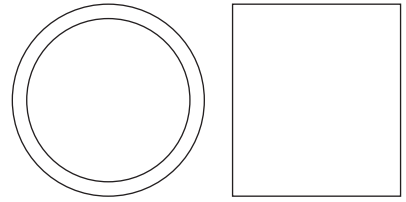


1" x 7/8" Plastic Bushing (75)

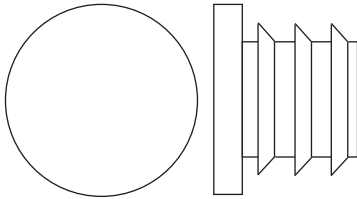


1" Round Inner Cap (49)

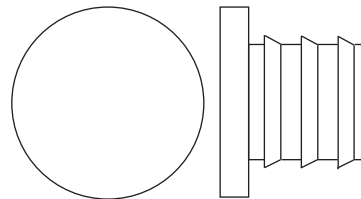


1" Inner Cap (81)

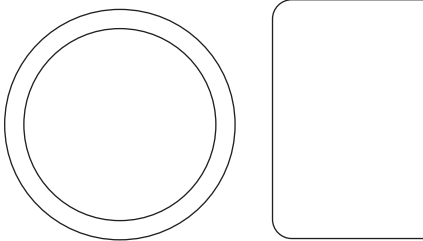


1" Round Cover Cap (70)

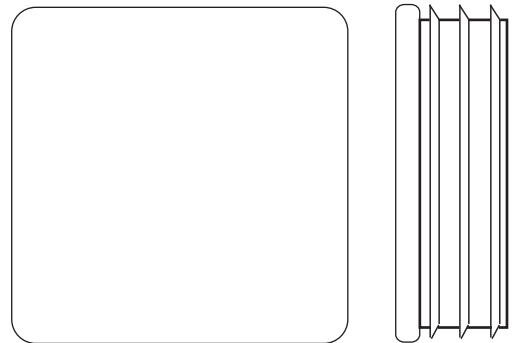

1 3/4" Square Inner Cap (44)

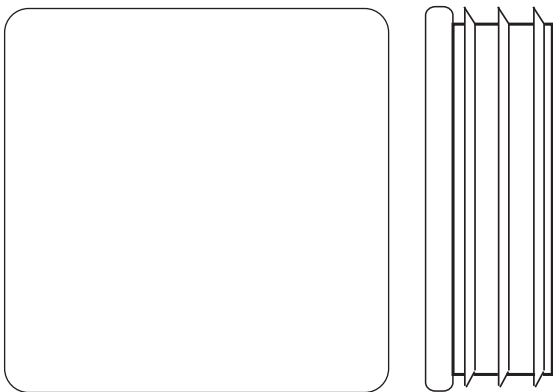

2" Square Inner Cap (27)

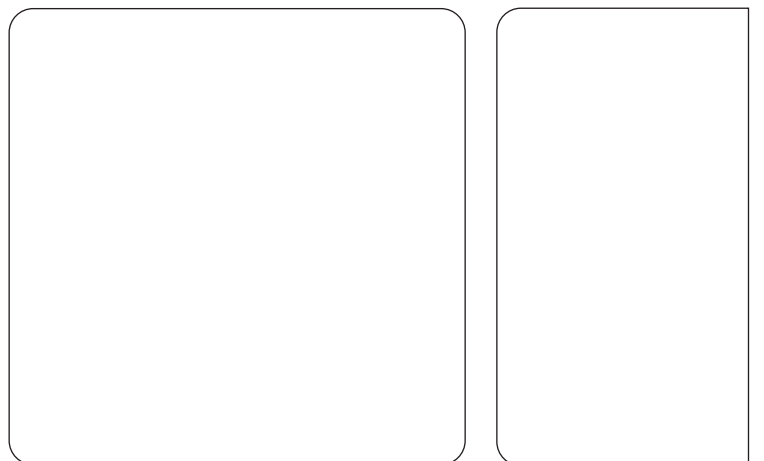

2" Square Outer Cap (51)

Part List—Model No. WLEMSY82000


R1000A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	4	5/16" x 2 1/2" Carriage Bolt	43	2	1/4" x 2 1/2" Screw
2	3	1/4" Nylon Locknut	44	10	1 3/4" Square Inner Cap
3	20	5/16" Nylon Locknut	45	2	10" Pad
4	1	Base	46	2	Press Arm
5	1	Stabiliser	47	1	Left Arm
6	4	"V"-Pulley	48	1	Right Arm
7	5	3/8" x 2 1/2" Bolt	49	2	1" Round Inner Cap
8	8	5/16" Flat Washer	50	4	Long Cable Trap
9	5	3/8" Flat Washer	51	2	2" Square Outer Cap
10	6	1/4" Flat Washer	52	1	Chain
11	6	5/16" x 2 3/4" Bolt	53	3	Cable Clip
12	3	3/8" x 2" Bolt	54	1	Lat Bar
13	1	Seat	55	1	Top Frame
14	2	5/16" x 2 3/4" Carriage Bolt	56	1	Rear Upright
15	8	3 1/2" Pulley	57	1	Long "U"-Bracket
16	3	3/8" x 3 1/2" Bolt	58	1	Short Cable
17	1	Press Frame	59	1	3/8" x 8" Bolt
18	2	1/4" x 3/4" Screw	60	1	5/16" x 6" Bolt
19	2	Weight Bumper	61	2	1/2" x 3/4" Spacer
20	1	Pulley Bracket	62	2	Weight Guide
21	15	3/8" Nylon Locknut	63	1	Weight Tube
22	5	5/16" x 2 1/2" Bolt	64	1	Weight Tube Bumper
23	1	Long Cable	65	2	#8 x 3/4" Tap Screw
24	1	1/4" x 2 1/4" Screw	66	6	Cable Trap
25	8	Weight	67	1	Small "U"-Bracket
26	1	Weight Pin	68	1	5/16" x 5" Bolt
27	2	2" Square Inner Cap	69	4	1" Retainer
28	1	Small Pad Tube	70	2	1" Round Cover Cap
29	1	Leg Lever	71	3	3/8" x 3 3/4" Bolt
30	4	5 1/2" Pad	72	1	5/16" x 1 3/4" Bolt
31	4	Hand Grip	73	2	Bumper
32	1	Rocker Arm	74	2	1 1/8" x 2 1/2" Plastic Bushing
33	1	3/8" Nylon Jam Nut	75	2	1" x 7/8" Plastic Bushing
34	4	3/4" Round Inner Cap	76	1	Top Weight
35	1	3/8" x 3 1/4" Bolt	77	1	3 1/2" Low Pulley
36	1	Seat Frame	78	1	Leg Press Plate
37	1	Seat Plate	79	1	Press Adjustment Tube
38	1	1/4" x 2 1/2" Carriage Bolt	80	1	Long Pad Tube
39	1	Nylon Strap	81	2	1" Inner Cap
40	1	"L"-Pin	#	1	User's Manual
41	1	Backrest			
42	1	Front Upright			

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice.

Exploded Drawing—Model No. WLEMSY82000

R1000A

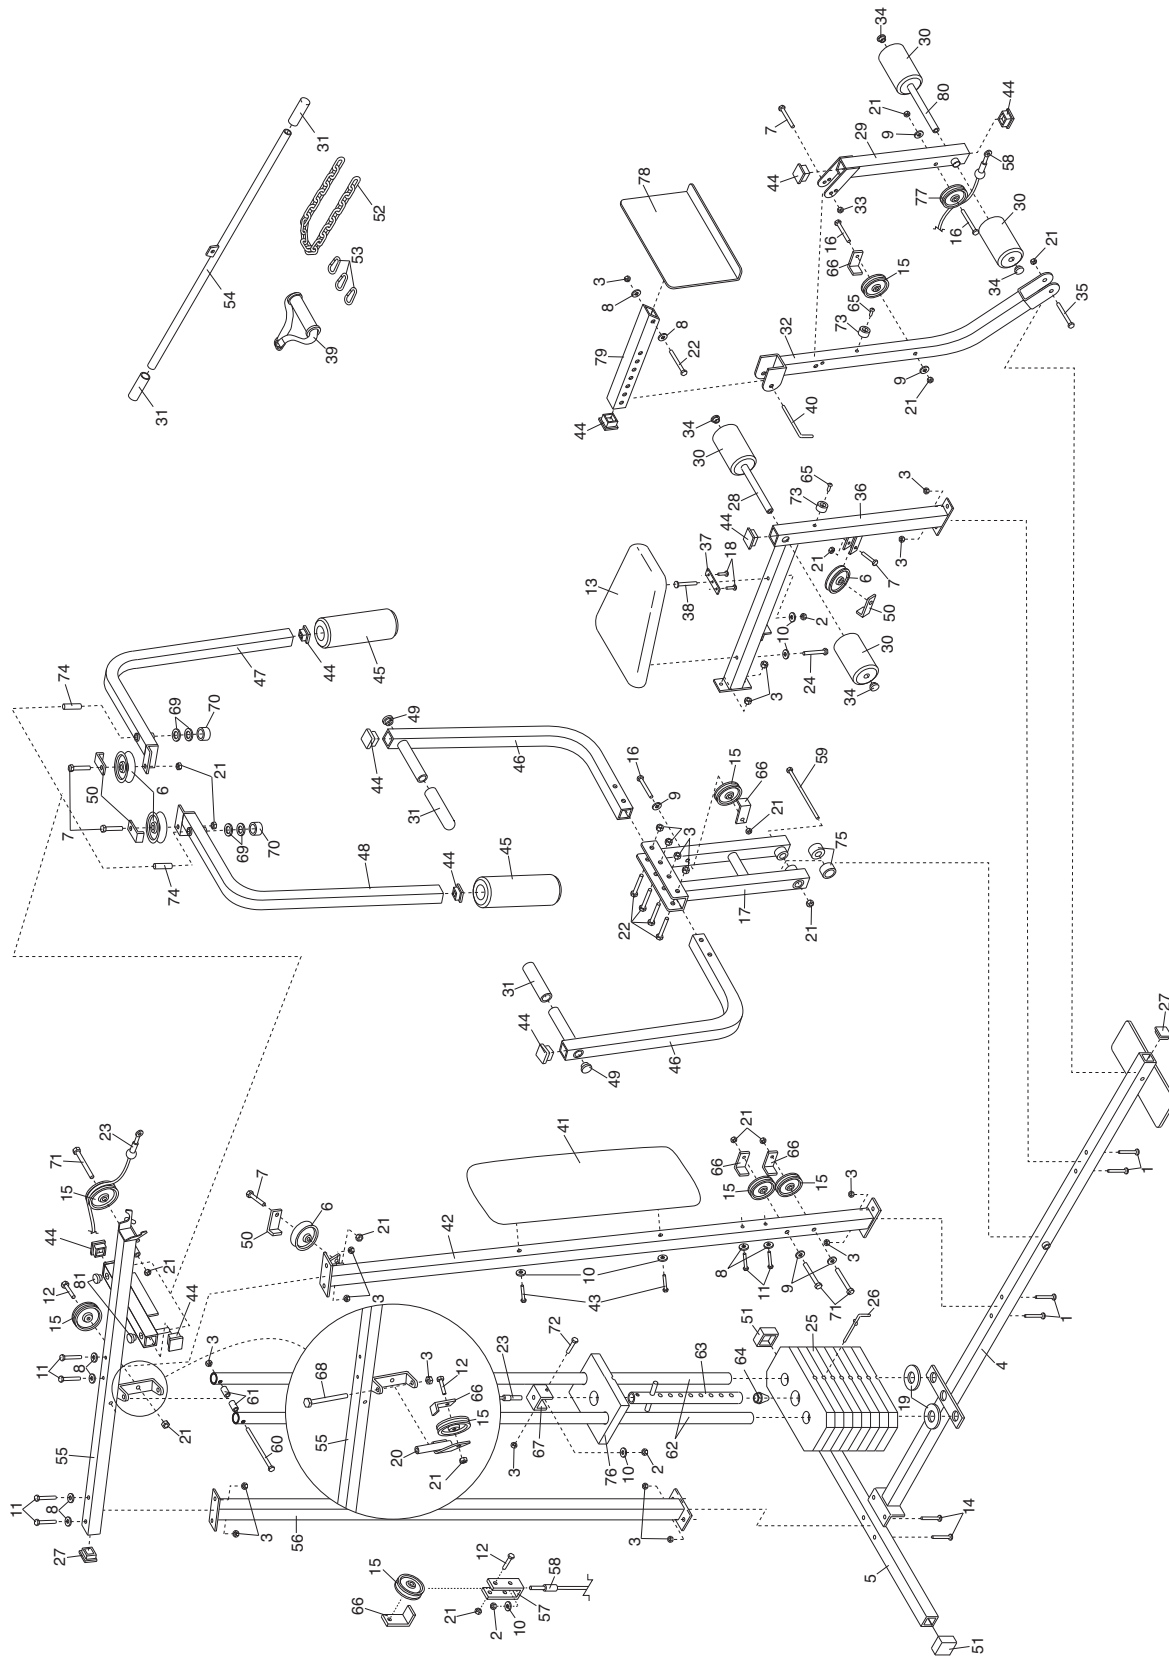

How To Order Replacement Parts

If you encounter any difficulties with this product or if you need to order replacement parts, please call or write the ICON Health & Fitness, Ltd. office.

ICON Health & Fitness, Ltd.
Greenwich House
223 North Street
Sheepscar
Leeds LS7 2AA
West Yorkshire

Tel: Country Code:

0345-089009

Fax: 0113-2411120

When calling or writing, please provide the following information:

1. The MODEL NUMBER of the product (WLEMSY82000)
2. The NAME of the product (WESLO® GYM 4000)
3. The SERIAL NUMBER of the product (see the front cover of this manual)
4. The KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST and EXPLODED DRAWING attached in the centre of this manual).